

**Maxx Motor Original Solo-A1 (without Bluetooth)  
Rechargeable Wand Control System with Internal Battery Motor**


12V DC with Battery Charger

**Motor Unit Assembling**

- Hang switch wand hanger with motor adapter
- Connect switch wand cable pin to the motor

**Battery Charging**

- Charging motor battery: use a DC5V plug charger
- Please recharge motor battery when motor alarm sounds off (DI, DI-DI) or motor begins to falter
- Charging time: 7 hours - please take the charger away when charging is complete

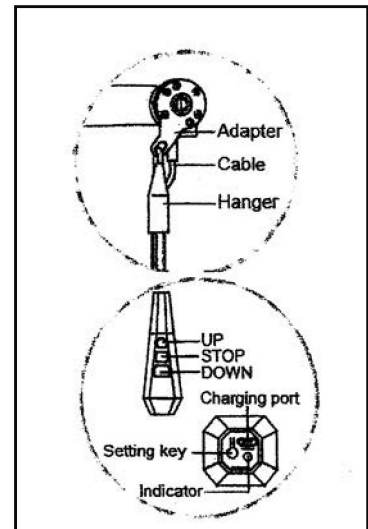

**Solo A1: Basic Operation & Troubleshooting**

| Command                         | Item | Key Combination  | Description  | Illustration |
|---------------------------------|------|--|--|--------------|
| Change Motor Rotation Direction | 1    | Press <b>UP</b> button   | If motor goes up, please do nothing. If motor goes down, please do next step |              |
|                                 | 2    | Press and hold <b>SETTING</b> button then press <b>STOP</b> button   | Release both buttons when motor sounds DI-DI-DI                              |              |
|                                 | 3    | Press <b>UP</b> button   | Motor goes up, the motor rotation direction has been revised                 |              |
| Lower Limit Setting             | 1    | Press and hold <b>SETTING</b> button on bottom of wand               | Release buttons when motor sounds DI-DI-DI                                   |              |
|                                 | 2    | Press <b>DOWN</b> button   | Motor goes down  |              |
|                                 | 3    | Press <b>STOP</b> button when close to the lower limit position      | Motor stops  |              |
|                                 | 4    | Press <b>UP</b> or <b>DOWN</b> button to adjust the finally position |  |              |
|                                 | 5    | Press button once at bottom of wand                                  | Motor sounds DI once: lower limit setting has been set                       |              |

# Solo A1: Basic Operation and Troubleshooting Continued

| Command                       | Item | Key Combination  | Description   | Illustration |
|-------------------------------|------|--|---|--------------|
| Upper Limit Setting           | 6    | Press <b>UP</b> button   | Motor goes up   |              |
|                               | 7    | Press <b>STOP</b> button when close to the upper limit position  | Motor stops   |              |
|                               | 8    | Press <b>UP</b> or <b>DOWN</b> button to adjust the final position   |   |              |
|                               | 9    | Press button once at bottom of wand  | Motor sounds DI once: upper limit setting has been set                          |              |
| Favourite Position Setting    | 1    | Press <b>UP</b> or <b>DOWN</b> button  | Press <b>STOP</b> button when blinds reach your favourite position              |              |
|                               | 2    | Press and hold <b>SETTING</b> button and then press and hold <b>UP</b> button  | Release both buttons when motor sounds DI-DI-DI: the setting has been completed |              |
|                               | 3    | Press <b>STOP</b> button to adjust the final position  | Motor goes to the favourite position and stops                                  |              |
| Switch Roller/Horizontal Mode |      | Press <b>SETTINGS</b> button on switch <b>3 times</b> , the working mode has been changed from Roller to Horizontal or from Horizontal to Roller.<br><br><b>Note:</b> The original factory setting is in roller blinds work mode.  |   |              |
| Horizontal Mode               |      | <p><b>Adjust light:</b> press <b>UP</b> or <b>DOWN</b> button less than 2 seconds, motor rotate a certain angle so the blinds moving step by step.</p> <p><b>Normal moving:</b> press and hold the <b>UP</b> or <b>DOWN</b> button for 2 seconds, after which the motor will rotate continuously towards upper or bottom limit end - otherwise press <b>STOP</b> if limit ends not set properly.</p>                             |   |              |
| Trouble-shooting              |      | <p><b>If nothing works, please check:</b></p> <ul style="list-style-type: none"> <li>- whether the battery wand and motor are connected properly;</li> <li>- whether the battery is charged - if not, recharge motor through wand</li> </ul> <p><b>If the motor continues to run in one direction, please check:</b></p> <ul style="list-style-type: none"> <li>- the limit setting which may have to be reset again.</li> </ul> |   |              |